

RFID

Last Modified on 05/21/2026 12:55 pm CDT

The grain RFID card reader is a beneficial tool to help truck drivers more efficiently complete the scale process.

Setup for RFID Readers, Preferences, and Toggle RFID/Pit Validation can be found at *Agvance Grain Scale Interface / Setup / RFID*.

Readers

The *Location, Scale, Reader, and Reader URL* for each reader must be entered so certain performed functions are known when tag numbers are pulled in from specific readers (i.e. When tag numbers come from the reader at an inbound scale, a new Scale Ticket is being added. When tag numbers come from a reader at outbound scale, an in-process ticket should be edited.)

The setup of the RFID reader for the auto-start of the Scale Ticket in Grain Scale Interface allows the option to choose which setup is to be used at each computer at a location. This allows two different computers at the same location to auto-start scales using two different RFID setups. The RFID setup must be selected on the RFID Reader.

RFID Reader Information

Location: 00MAIN

Scale: [dropdown]

Pit: [dropdown]

Lane: 123

Reader: Reader1

Reader URL: Reader1URL

Photo Eye URL: [text input]

PLC IP Address: [text input]

Brand: Kahler TagMaster Prairie Scales

Auto Start Reader Recall Freight

Enable unmanned outbound scale

Disable unmanned outbound for ticket type of commodity transfer

Save Cancel

- **Location** – Select the Location of the RFID reader.
- **Scale** – Select the Scale for the RFID reader.
- **Pit** – Select the Pit associated with this RFID reader.
- **Lane** – This field is used to tie an Auto Start RFID Reader to a [Message Board](#). This gives the ability to auto start messages on each scale's respective Message Board without affecting the other scale/Message Board. Enter the same *Lane* for both the Reader and the Message Board.
- **Brand** – Select the appropriate brand for the scales - *Kahler* or *Prairie Scales*.
- **Type** – If *Prairie Scales* is selected as the *Brand*, select the *Type* to be used - *COM* or *Ethernet*.

- **Auto Start Reader** – This allows the reader to be set up to auto start a Scale Ticket. This option allows a reader to not be associated with a scale.

Note: Selecting this option when using TagMaster RFID readers refreshes its network connection after 5 minutes of inactivity.

- **Recall Freight** – When this is set, the Vendor and rate are pulled in from the previous ticket of the same RFID.
- **Reader** – When the *Type* is set to *Ethernet*, this area is available. Enter text to identify the reader.
- **Reader URL** – For *Ethernet Type* readers, enter the URL for the reader. If using the *Prairie Scales Ethernet Type*, enter the IP address.
- **COM Port** – When *COM* is selected as the *Type*, select the communication port from the drop-down menu.
- **Enable unmanned outbound scale** – This option allows the RFID reader to automatically read the RFID card, capture the missing weight, and print the ticket if the ticket is complete. If the ticket is not complete, then it disables *Unmanned mode*.
- **Disable unmanned outbound for ticket type of commodity transfer** – This setting should be enabled for the unmanned outbound RFID Reader to ensure unmanned does not run when the RFID tag is scanned on unmanned scale RFID Readers for Outbound Commodity Transfers.
Note: This option is available only when *Enable unmanned outbound scale* is checked.
- **Photo Eye URL** – The URL for the photo eyes on the scale is entered here for use with *Unmanned mode*.
- **PLC IP Address** – This address is used to communicate with the PLC program when using a Prairie Scales RFID reader for pit validation.

Preferences

RFID Preferences ✕

Default info from selected scale ticket

Automatically select most recent ticket

Lookback # of days

Control Stoplight at Scale

of Seconds Green

Photo Eye Delay Before Weight Capture

of Seconds

Scale Ticket Repeat RFID Delay Length

of Seconds

Outbound / Unmanned Close Scale Ticket Read Delay

of Seconds

Require Photoeye Toggle After Unmanned Ticket

- **Default info from selected scale ticket** – With this option selected, some information from an earlier Scale Ticket with the same RFID Number defaults. The information that defaults is the *Assembly Number*,

Commodity, Customer, Share %, Contract, DPR, Vehicle Description, Farm ID, Field ID, and Number of Axles.

- **Automatically select most recent ticket** - Selecting this option defaults the information from the most recent into the Scale Ticket.
- **Lookback # of days** - Enter the number of days to look back to find another Scale Ticket with the same RFID Number to default information into the new Scale Ticket.
- **Control Stoplight at Scale** - If a stoplight is linked to the scale using a Kahler RFID reader, this preference allows the RFID reader to control the stoplight when using the *Unmanned* mode or manually when the Scale Ticket is being entered.
 - **# of Seconds Green** - When using the *Control Stoplight at Scale* preference, enter the number of seconds the stoplight should stay green when saving a Scale Ticket or when manually changing the light to green by selecting **Light** on the *Add a Scale Ticket* window.
- **Photo Eye Delay Before Weight Capture** - Select this option to enable a delay for the *Unmanned* mode.
 - **# of Seconds** - Enter the number of seconds to wait when an RFID Scale Ticket is ready to be finished and the photo eyes have gotten a clear signal. If the photo eyes are interrupted any time during this countdown, the timer resets and begins the countdown again after the clear signal is sent.
- **Scale Ticket Repeat RFID Delay Length** - When using a Kahler RFID reader, this option can be used to set a default of how long to wait before the same RFID tag number can be read again.
 - **# of Seconds** - Enter the number of seconds to wait before the same RFID tag number can be read again.
- **Outbound / Unmanned Close Scale Ticket Read Delay** - This option ensures a ticket will not get closed out by an unmanned outbound reader as soon as the truck leaves the inbound scale.
 - **# of Seconds** - Enter the number of seconds to wait before closing after initially saving the ticket.
- **Require Photoeye Toggle After Unmanned Ticket** - When using this preference, the unmanned process on the next ticket will not start until the photo eyes are broken.

Toggle RFID/Pit Validation

This option turns the Kahler RFID tag reader verification on or off. The last used setting for this option is retained but may be changed as needed.



