


Message Boards

Last Modified on 01/31/2024 7:55 am CST

The Pit's message will display on the Message Board for the driver if a Scale Ticket is saved with a Pit and that Pit has a Message Board associated with it. The options that display on this screen are dependent on the *Type* and *Make* selected.

Agvance Grain Scale Interface supports the IPDisplays message board IPD-D03F. Contact SSI for assistance with setup.

Message Board

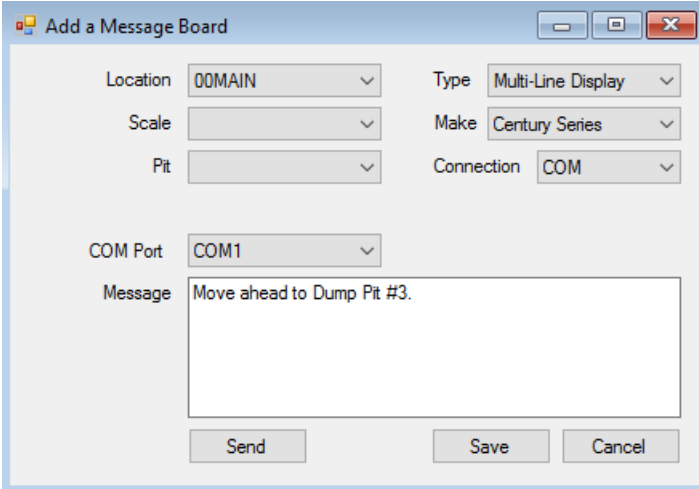

- **Location** – Select the Location for the Message Board.
- **Scale** – Select the scale associated with the Message Board.
- **Pit** – Select the Pit associated with the Message Board.
- **Type** – Choose *Single-Line Display* or *Multi-Line Display* for the type of board being used.
- **Make** – Depending on the *Type* selected, choose the *Make* of the board.
- **Connection** – Select *Ethernet* or *COM* as the connection.
- **Webservice URL** – For *Multi-Line Displays*, enter the URL for web communication.
- **IP Address** – For *Multi-Line Displays*, enter the IP address for web communication.
- **Port** – Specify the port being used for the *Ethernet* connection.
- **COM Port** – Select the COM port being used for the Message Board.
- **Message** – Enter the message to display on the Message Board.
- **Send** – This sends the message to the designated Message Board being added or edited.

Default Messages

Default Messages may be set to display when the RFID tag is scanned. This optionally displays information from

recent tickets associated with the RFID tag.

The screenshot shows the 'Add Default Message' dialog box. It features a title bar with a close button. The main area is divided into several sections. At the top, there are three dropdown menus: 'Event' (set to 'Scan RFID - Autostart Match'), 'Scale' (set to '1'), and 'Location' (set to '00MAIN'). Below these are four rows, each representing a line of information to be displayed. Each row has a 'Custom' checkbox (checked for all lines) and a 'What to Display' dropdown menu. Line 1 is set to 'First Customer Name', Line 2 to 'Customer Split %', Line 3 to 'DPR', and Line 4 to 'Commodity Name'. At the bottom, there is a 'Grade Factors' button, a 'Length of Time to Display Message' dropdown set to '10', and 'Save' and 'Cancel' buttons.

- **Event** – Select the event that occurs when the Default Message displays on the Message Board. There are auto-start options for the Message Board which can occur when the RFID is scanned and there is a match or if there is no match. There are also options to *Capture Value from Moisture Tester*, *Scan of RFID Card*, *Add of Ticket with Gross Weight*, *Capture of Gross Weight*, and *Capture of Tare Weight*.
- **Scale** – Choose the scale where this Message Board is located. Options 1 and 2 represent scales. Option 3 represents a computer, such as a probe station.
- **Location** – Select the Location for the Default Message.
- **Line 1 - Line 4** – Choose the lines to display.
- **Custom** – Select this option if the message to display is custom.
- **What to Display** – If not using custom messages, choose the option to display for each line on the Message Board. If using the *Custom* option, enter the message to display.
- **Grade Factors** – If *Grade Factors* is selected in the *What to Display* column, select the Grade Factors to display.
- **Length of Time to Display** – Indicate the number of seconds the information displays on the Message Board.