


Ranco Connection Setup

Last Modified on 11/22/2024 3:24 pm CST

The images below show how to wire the Ranco and B & B Adapter.

- The dip switch settings on the rear of the B & B Adapter are shown below.

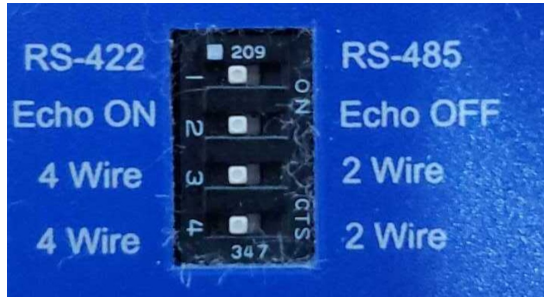

- Pin outs on the B & B Adapter



- The pin outs inside the Ranco Panel.



These numbers correspond to the pin outs below:

1. ->TDB+
2. ->TDA-
3. ->RDA-
4. ->RDB+
5. ->GRND