

Agvance Scale Interface Manual

Last Modified on 02/09/2023 8:47 am CST

Agvance Scale Interface is used to capture digital scale readings in Agvance Scale tickets. This interface can run on a stand-alone machine (connected to the scale) or a machine on the network. The user can put in as much (or as little) information as known at the time. The computer connected to the scale must have two com ports. The scale plugged into one, and the scale ticket printer plugs into the other. If multiple scales are connected to a computer, each must plug into its own separate com port to be in compliance with the National Institute of Standards and Technology laws and regulations which have been adopted by most states. The link below is the full Agvance Scale Interface Manual.

[Agvance-Scale-Interface-Manual](#) 