Digi One SP - Serial to IP Device Setup

Last Modified on 07/16/2025 9:35 am CDT

The Digi One SP can be used in an Agvance Hosted environment using the *Device-initiated RealPort* option and can connect to a DNS Name or an IP Address. The **Device Webpage** and the **Quick Start Guide** are available as resources for the Digi One SP.

On the Local Scale PC

- 1. Download and run the Digi Device Discovery utility.
- 2. Choose the OS from the drop-down.
- 3. Save and then run the **Device Discovery Utility**.

Diagnostico, o titicico ana miso

OPERATING SYSTEM SPECIFIC UTILITIES:

Microsoft Windows 10

OPERATING SYSTEM SPECIFIC DIAGNOSTICS, UTILITIES AND MIBS

 \sim

- Device Discovery Utility for Windows Release Notes
- Device Discovery Utility for Windows Standalone version, ver. 1.7.22.0
 - The standatone version is a windows texe me which you can run nom your desktop or elsewhere.
- 4. Select the detected device and choose Open web interface.

			LIAPHOSTICS	UTILITIES AND M	185	
奎 Digi Device Discovery				_		×
Device Tasks	IP Address	MAC Address	Name	Device		
Open web interface Telnet to command line Configure network settings Rectart device	3	00:40:9D:A4:4C:0	F	Digi One SP		
Other Tasks						
Refresh view Help and Support						
Details						
2 devices		N		My Device N	letwork	

5. Sign into the web console with root as the Username and dbps as the Password.

Sign in			
http://10.100 Your connect	0.105.81 tion to this site is not private		
Username	root		
Password	dbps		
		Sign in	Cancel

- 6. Use the IP Address displayed on this screen for the scale configuration in Agvance Scale Interface.
- 7. Select Serial Port in the Configuration section to display the port.

Digi	Digi One SP Configuration and Management				
Home	Home				
Configuration Network Serial Port Security	Getting Started Tutorial Not sure what to do next? This Tutorial can help.				
System Management Serial Ports Connections	System Summary				
	Model: Digi One SP IP Address:				
Administration Backup/Restore Update Firmware Factory Default Settings Device Information Reboot	MAC Address: 00:40:9D:A4:4C:0F				
Logout					

- 8. Use the Raw TCP Port Number displayed on this screen for the scale configuration in Agvance Scale Interface.
- 9. Test in hyperterminal or debug in Scale Interface. Use the IP address from Step 7 and the *Raw TCP Port* number from Step 8.