# Setup Instructions for Epson Receipt Printer and APG Cash Drawer

Last Modified on 07/16/2025 9:35 am CDT

These components are sold by Dell as part of their POS Integrator system bundles and individually as POS peripherals. The Epson TM-T88IV Receipt Printer is a USB printer. The Cash Drawer connects to the Receipt Printer using a special cable that looks like a modular phone cord. Like most cash drawers, these cash drawers are controlled by the printer. The Epson TM-T88IV Receipt3 Printer Driver can be configured to cut the receipt at the end of each receipt. Dell POS Integrator system bundles come with this printer driver preinstalled. If the Receipt Printer is purchased separately, this driver will need to be installed.

ATM\_310E.exe 🖉

## Agvance Receipt Format

The 40 Character Plain Text receipt format was created for the Epson TM-T88IV Receipt Printer. This receipt format is similar to the 40 Character Dot Matrix format. The 40 Character Dot Matrix format prints directly to the printer port (bypassing any printer driver). The 40 Character Plain Text format prints to the selected printer driver which allows the printer driver to send additional commands (like Open Drawer and Cut Receipt) at the end of each printout.

## Opening Cash Drawer through Agvance

Like most cash drawers, these cash drawers are controlled by the printer. In the case of printers connected to the computer with a standard Parallel or Serial cable, Agvance can send a set of special codes to the printer that will cause it to open the Cash Drawer. Agvance cannot send these codes to a printer that is attached to the computer with a USB cable. However the printer can send the *Open Drawer* command at the end of printing each receipt. There are two options for using the Epson TM-T88IV Receipt Printer:

#### Option 1 – Using the USB Printer and Drawer Key

Open the drawer at the end of printing each receipt and use the cash drawer key to open the drawer at other times. This option gives the ability to use the receipt printer with no modifications.

### Option 2 - Converting Printer from USB to Parallel or Serial

Convert the receipt printer from USB to Parallel or Serial by changing the printer's interface board. This gives the ability to send the *Open Drawer* command by choosing **Open Drawer** on the *Quick Ticket* screen. It is also possible to configure the printer to open the drawer at the end of printing each receipt. An Epson TM-T88IV Receipt Printer can be converted from USB to Parallel or Serial by replacing the printer's interface card. On the back of the printer, remove the panel the USB cable plugs into by removing two screws (these are the only screws that are accessible on the back of the printer). The Interface card is attached to this panel. Obtain a Parallel or Serial interface card (which will be attached to their own panel) and install the new panel in the place of the USB panel. Interface cards can be purchased through an Epson Reseller. For a list of Epson Resellers, contact BlueStar (an Epson distributor) at

## Open Codes for APG Cash Drawer sold by Dell

If the printer has been converted to Parallel or Serial, send the *Open Drawer* command by selecting **Open Drawer** on the *Quick Ticket* screen. To set up these codes in Agvance Accounting, go to A/R / Manage Quick Tickets and select **Options**. On the configuration screen, select the COM port assigned to the printer and enter0D,0A,1B,70,30,40,50 as the *Open Codes*.

Quick Ticket Preferences - 1RE	×
<cash customer=""> Cashs Online Posting  Set Due Date to Next FM Use Customer Tax Information Require Sales Person Require Signature for Company Credit Use Discounts from Inventory Department Product Selection Bar Code Move To Quantity Product Selection Window Prod ID / Alt ID / Name Move To Quantity Print Options Print Location Heading Center</cash>	Default Invoice Type Cash   Terms  Terms  Attributes <age product="" restricted="">  AgeRestriction  Restricted Product Checking  Don't Check</age>
Receipt Printer ADOBE PDF ~	Moneris Receipt Print Options
Form Type 8 1/2 x 11 Laser V	
Print # Copies Printer Port	
Collate Copies How Many Lines 0	
LC Printer 🗸	
LC Form Type 8 1/2 x 11 ~	
LC Copies 1	
Cash Drawer Ontions	Pole Display Options
Cash Drawer Options	
	Port (None) V
Printer ADOBE PDF	DTR Enabled Baud/Parity/Data/Stop
Open Codes 0D,0A,1B,70,30,40,50	RTS Enabled
Baud/Parity/Data/Stop	Message Refresh
RTS Enabled DTR Enabled	
Additional Print Options	Save Cancel

Note: These codes must be entered exactly without any additional spaces.

## Configuring Printer to Open Cash Drawer and Cut Receipt

To set up the printer to open the cash drawer and cut the receipt when a receipt is done printing:

1. Open the Printer Properties and select the Advanced tab. On the Operation tab, choose End of Document.

General         Theiring         Pots         Advanced         Security           Ayrups available         Available         To         1200 AM         To         To <t< th=""><th>General</th><th>Barcode 2D-Co</th><th>de Utility I</th><th>Font Versio</th><th>n</th></t<>	General	Barcode 2D-Co	de Utility I	Font Versio	n
Avays available     Available     Available     Available     To     1200 AM     To     To     1200 AM     To     To     To     1200 AM     To		Sharing Ports	Advanced	Security	-
Availagle from      12.00 AM     To	Always av	allable			
Priority: 1  Private: EPSON TIN-TSBIV Receipt3  Pri	🔿 Availa <u>b</u> le f	rom 12.00 AM	\$ To 12	00 AM	
Drige: EPSON TIA-T881V Receipt3 V New Driver Spool print documents so program finishes printing faster State printing after last page is spooled State printing immediately Print gheadly to the printer Hold mismatiched documents Gripting spooled documents Tritting Geop printed documents	Priority: 1	\$			
Sool pirt documents so program finishes pirting faster     Sat printing after last page is spooled     Sat printing immediately     Prin glocably to the piriter     Bid manatched documents     Print spooled documents	Driver: EPS	ON TM-T88IV Receipt3	~	New Driver	
Enable advanced printing features	Print spool	ed documents first ed documents vanced printing features		_	
ring rocessor Separatg rage	Enable ad	tauts Phrit Proc	essor Jep	arator rage	J

	Settings	Halft	one Settings	Utilty	y Versio
Main	Lay	yout	Water	Mark	Operation
Start of I	Document	Ope	eration when	document s	tarts
Start	of Page		eration wher	i page starts	
End o	f Page	<u></u>	eration wher	i page ends	
End of [	Document	Ор	eration wher	n document	ends

2. Make sure Open drawer 1 is selected and the Paper Cut is set to Partial Cut.

Send Cor	mand
Open Drawer:	Open drawer1
Paper Feed	0.0 * mm
Form Feed	_
Paper Cut	
Manual Cut	Cut position before cut Partial Cut
	A